


STEP 1 - PRINT THIS PAGE AT 100% SIZE.

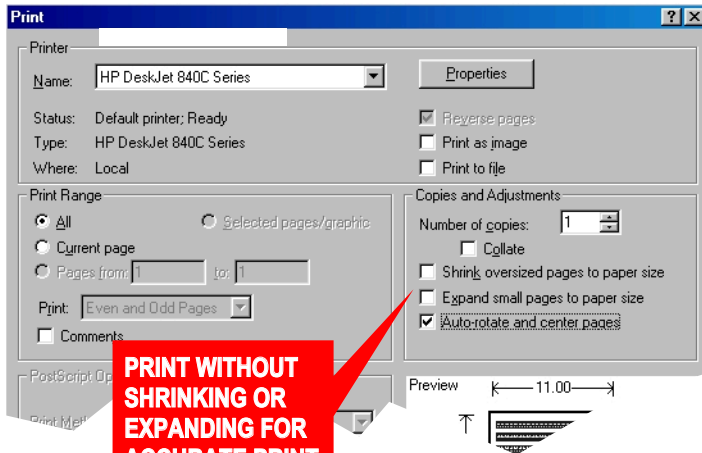

PRINT WITHOUT SHRINKING OR EXPANDING FOR ACCURATE PRINT OF RULER SIZE.

2 CUT 2 OR MORE STRIPS FROM PAGE.

3 USE ONE STRIP TO ENCIRCLE CIRCUMFERENCE OF LARGEST WIDTH POINT TO BE COVERED BY SHRINK BAND, SLEEVE OR LABEL. (CAREFULLY TAPE 2 STRIPS TOGETHER FOR LARGER CIRCUMFERENCE IF NEEDED.) ADD 3mm EASE FOR MEASUREMENT UNDER 100mm & CUT AT THAT POINT. ADD 5mm EASE FOR MEASUREMENTS OVER 100mm & CUT AT THAT POINT.

4 FIND LAYFLAT. TAPE END FOUND IN STEP 3 TO START END, THEN FOLD IN HALF TO READ 1/2 WAY MEASURE, OR LAYFLAT. USE NEXT LARGEST mm MARK IF 1/2 WAY IS BETWEEN mm NOTCHES.

5 USE ANOTHER STRIP TO MEASURE TOP TO BASE LENGTH (CUT LENGTH) & ANY OVERLAP EXPECTED AT TOP OF CONTAINER.

6 FOR FREE & ACCURATE MEASUREMENT VERIFICATION, SEND 3 CONTAINERS WITH FULL RETURN ADDRESS & PHONE NUMBER TO:

**TRACO MFG. INC.
CARE OF "SAMPLE"
620 SOUTH 1325 WEST
OREM UT 84058**

QUESTIONS? LIVE HELP MON-FRI 7-5 MT:
CALL TOLL FREE: 800.284.9727 (U.S.A.)
METRO/INTERNATIONAL: 801.225.8040

